




ref. 432 - WUUD_drinking fountain

MATERIAL_CONCRETE
 CONCRETE FINISHING_HYDROFUGATED
 CONCRETE COLOR_NATURAL CONCRETE
 WEIGHT_170KG
 FIXING_GROUND INCORPORATE


SiT

TECHNICAL DETAILS scale 1/20


+ FIXING POINT

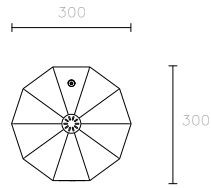

TOP VIEW

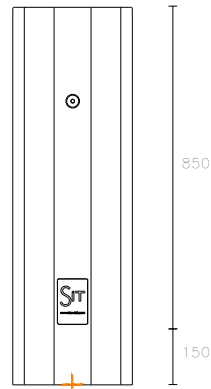


FRONT VIEW

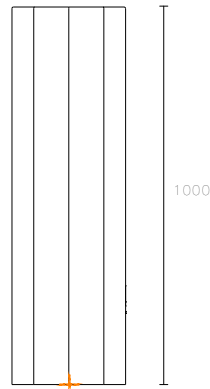

SIDE VIEW

ELEVATION scale 1/20




PLACEMENT OF POLYESTER STRAPS ON THE INFERIOR LIFTING APERTURES WITH PROTECTION ON CONTACT SURFACES

FIXING scale 1/10

STEEL BAR 150mm FIXED IN INTERIOR NUT AND GROUND INCORPORATE

- 01_wastepipe pvc 32 mm
- 02_water supply pex 16 mm
- 03_steel bar 150mm
- 04_emergency tap / water flow regulator

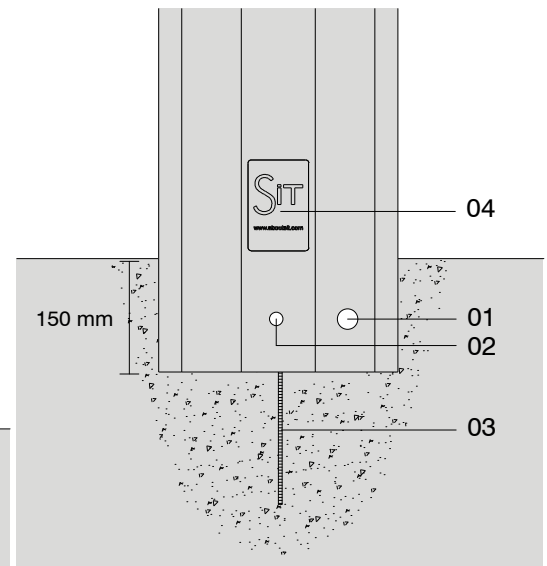

www.aboutsit.com . info@aboutsit.com

Av. Nossa Sra. da Vitória, 8 . S. Jorge | 2480-062 Porto de Mós .
 Portugal | tel. +351 244 482 525 | GPS: 39°37'50.71''N 8°51'10.44''W